

# DOOR SOLUTIONS

**Problem:**

Blinds won't open or close.

 
**Cause:**

Magnets control the ability to raise and lower the blinds. Moving the operator abruptly or improperly handling of the door unit during transporting may have caused the magnets to temporarily disengage.


**Solution:**

1. Make sure operator is all the way down and in contact with the glass.
2. Slowly begin to slide the operator up towards the top of the unit. When the operator stops, continue to push the operator until you hear one click and then a second click. Once you have heard the second click the operator is re-engaged.
3. Lower and raise the blinds a few times to make sure the blinds are working properly.

**Transporting Reminders**

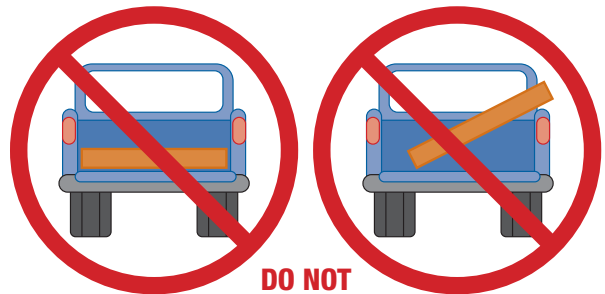

DO NOT  
LAY FLAT OR TILT

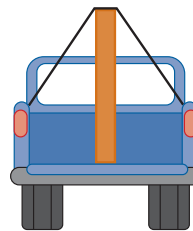 

KEEP  
UPRIGHT

**View Online Video:**

<https://youtu.be/KMJDt9MRsmY>

or search youtube.com for:

"Re-engaging the magnet/operator on Enclosed Blinds"



**MINI-BLIND  
OPERATOR**