

CHECKING FOR DOOR WARPAGE

- It is not uncommon for a temporary warp conditions to occur as the door slab adjusts to local humidity and temperature conditions.
- Slight expansion or contraction due to varying environmental conditions is considered normal.
- To check for possible warpage, place a level flat against the door slab itself, as shown on **FIG. 1**. Use a level that is at least 6' long.
- Slab movement of 1/4" or less is not considered warping, as this is considered natural movement that can happen due to temperature or humidity.
- To check for proper jamb installation, measure installed jamb width in 3 places: top, middle and bottom, see **FIG. 2**. These measurements should be the same.

FIG. 1


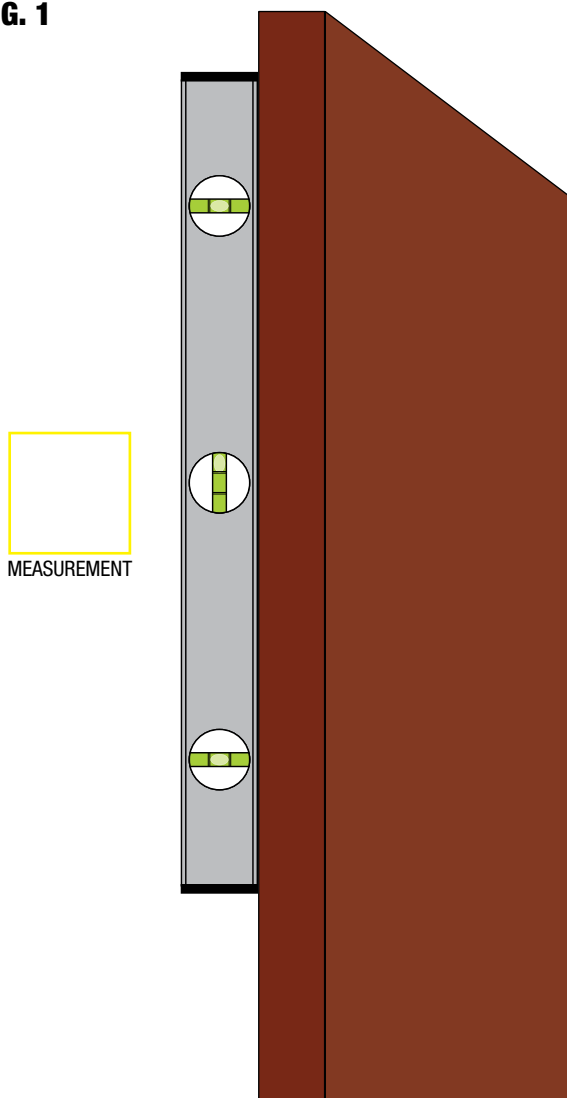


FIG. 2

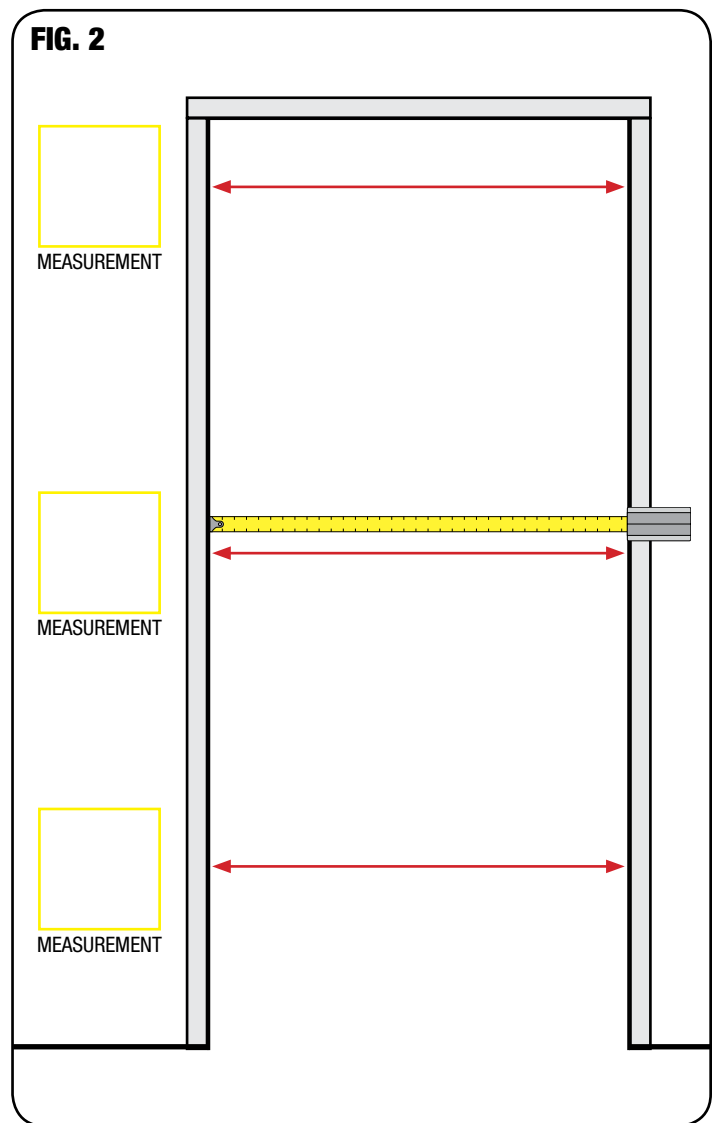

DATE

CUSTOMER NAME